



紧急停止开关 Emergency Stop Switches

名称外观 Appearance	产品型号 Model	触点形式 Contact Type	操作类别 Operation Type	颜色 Color	额定电压 Rated Voltage
-----------------	------------	-------------------	---------------------	----------	--------------------

紧急停止开关(常规触点) Emergency Stop Switches(Conventional Contact)

	SD30-8102	1NC	按锁定拉出旋转复位 Push-lock Turn Reset	红色 Red	
	SD30-8101	2NC			

带灯紧急停止开关(常规触点) Illuminated Emergency Stop Switches(Conventional Contact)

	SD30-8702	1NC	按锁定拉出旋转复位 Push-lock Turn Reset	红色 Red	D 24VDC E 12VDC F 6.3VDC A1 110VAC A2 220VAC
	SD30-8701	2NC			

小头紧急停止开关(常规触点) Small Emergency Stop Switches(Conventional Contact)


	SD30-X101	1NC	按锁定拉出旋转复位 Push-lock Turn Reset	红色 Red	
	SD30-X102	2NC			

小头带灯紧急停止开关(常规触点) Small Illuminated Emergency Stop Switches(Conventional Contact)

	SD30-X701	1NC	按锁定拉出旋转复位 Push-lock Turn Reset	红色 Red	D 24VDC E 12VDC F 6.3VDC A1 110VAC A2 220VAC
	SD30-X702	2NC			

外形尺寸 Dimensions

(单位unit: mm)

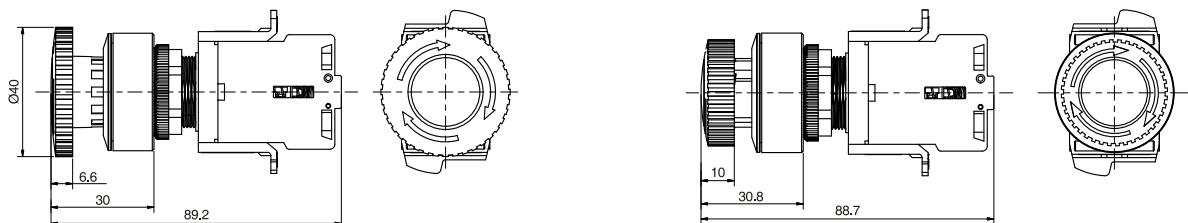

常规触点急停按钮开关 Conventional E-stop Switches