 
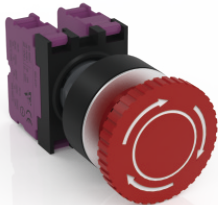 
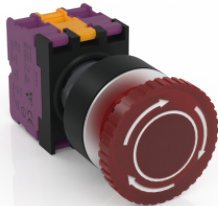 
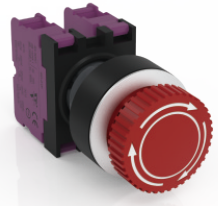 


SD30 Series

Pushbutton Switches

名称外观 Appearance	产品型号 Model	触点形式 Contact Type	操作类别 Operation Type	颜色 Color	额定电压 Rated Voltage
紧急停止开关(短触点) Emergency Stop Switches(Short Contact)					
	SD30-8101F	1NC	按锁定拉出旋转复位 Push-lock Turn Reset	红色 Red	
	SD30-8102F	2NC			
带灯紧急停止开关(短触点) Illuminated Emergency Stop Switches(Short Contact)					
	SD30-8702F	1NC	按锁定拉出旋转复位 Push-lock Turn Reset	红色 Red	D 24VDC E 12VDC F 6.3VDC A1 110VAC A2 220VAC
	SD30-8701F	2NC			
小头紧急停止开关(短触点) Small Emergency Stop Switches(Short Contact)					
	SD30-X101F	1NC	按锁定拉出旋转复位 Push-lock Turn Reset	红色 Red	
	SD30-X102F	2NC			
小头带灯紧急停止开关(短触点) Small Illuminated Emergency Stop Switches(Short Contact)					
	SD30-X701F	1NC	按锁定拉出旋转复位 Push-lock Turn Reset	红色 Red	D 24VDC E 12VDC F 6.3VDC A1 110VAC A2 220VAC
	SD30-X702F	2NC			

外形尺寸 Dimensions (单位unit: mm)

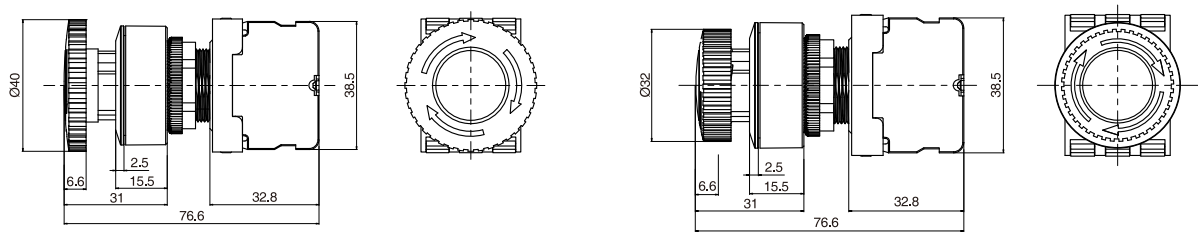

短款触点急停按钮开关 Short E-stop Switches